



**RANKIN-DELUX, INC.**

3245 Corridor Drive  
Eastvale, CA 91752  
Website : [www.rankindelux.com](http://www.rankindelux.com)

Phone : 951-685-0081  
Fax : 951-685-0084  
email : rankinone@aol.com

**OWNERS MANUAL**  
**SUPER STOCK POT RANGE / SSPR SERIES**  
INSTALLATION, OPERATING, MAINTENANCE INSTRUCTIONS, PARTS LIST

**NOTE**

UPON RECEIPT, CAREFULLY CHECK YOUR APPLIANCE FOR FREIGHT DAMAGE. MAKE A NOTATION OF ANY VISIBLE DAMAGE TO THE CARTON OR CRATE ON THE CARRIER'S WAY BILL. IF YOU DISCOVER ANY DAMAGE AFTER YOU UNPACK YOUR APPLIANCE, IMMEDIATELY CALL THE CARRIER AND REQUEST AN INSPECTION. KEEP ALL CRATES AND CARTONS UNTIL THE DAMAGE HAS BEEN INSPECTED.

CHECK APPLIANCE RATING PLATE ON STAINLESS STEEL FRONT PANEL FOR TYPE OF GAS. IF THE PLATE DOES NOT CORRESPOND TO YOUR GAS TYPE, CONTACT YOUR DEALER UPON RECEIPT.

**FOR YOUR SAFETY**  
**DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS OR LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE**

**WARNING: Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read the installation, operating and maintenance instructions thoroughly before installing or servicing this equipment.**

**KEEP THIS MANUAL FOR FUTURE USE**

After installation of your equipment, immediately contact your local gas supplier to obtain information as to what action to take in the event that the user smells gas.

**This information must be posted in a prominent location.**

**IMPORTANT**

***FAILURE TO FOLLOW THESE INSTRUCTIONS WILL VOID WARRANTY***

Safe and satisfactory operation of your appliance depends to a great extent upon its installation. Installation must conform with local codes or, in the absence of local codes, with National Fuel Gas Code ANSI Z 223.1 (Latest Edition)

**INSTALLATION MUST BE MADE BY A LICENSED/QUALIFIED COMMERCIAL GAS EQUIPMENT SERVICE AGENCY/COMPANY**

The input rating on your appliance is for elevations up to 2,000 feet. For elevations above 2,000 feet the rating must be reduced to 4% for each 1,000 feet above sea level.

**INSTALLATION, OPERATION & MAINTENANCE**

**(1) PRE-INSTALLATION - SPACE AND GAS CONNECTIONS**

(a) The area around the appliance must be kept free and clear from combustibles. The area in front of and above the appliance must be clear to avoid any obstruction to the flow of combustion and ventilation air. Means must be provided for adequate air supply and adequate clearance from air openings into the combustion chamber.

(b) Adequate clearance must be provided in front and sides of appliance for servicing and proper operation.

(c) Your appliance is designed for installation in a combustible or non-combustible location. If the appliance is installed in a combustible location, the following clearances must be observed: 8" to sides and 8" to back. If installed in a non-combustible location, the clearances are: 0" sides and 0" back.

**(2) INSTALLATION**

(a) The gas pressure regulator supplied with the appliance must be installed on the appliance prior to connection to the gas supply lines. The outlet pressure setting is 5" water column on natural gas and 10" water column on propane gas (LP Gas).

(b) Connect the appliance to a gas supply line having a 3/4" iron pipe size or larger. If a flexible connector is used it must be 3/4" I.D. (Domestic range connector will not permit proper operation). A gas shutoff valve must be installed in the gas supply line ahead of the appliance for future service. Use pipe sealant on all joints. Sealant must be resistant to the action of LP gas. A 1/8" pressure tap is provided on the gas manifold for checking the gas pressure. Always check pressure with all burners on and adjacent equipment operating.

(c) Level the appliance by adjusting feet at the bottom of the legs. Leveling is important for proper operation and combustion.

(d) To check for leaks, use a soap and water solution. **DO NOT USE OPEN FLAME.**

(e) The appliance and its individual shutoff valve must be disconnected from the gas supply piping system during any pressure testing of the system at test pressures in excess of 1/2 psig (3.45kPa).

(f) The appliance must be isolated from the gas supply piping system by closing its individual manual shutoff valve during any pressure testing of the system at test pressure in excess of 1/2 psig (3.45kPa).

**(3) OPERATION**

(a) **Lighting and Shutting Down**

Before lighting the appliance, make sure that all burners and pilots are turned off. Wait 5 minutes. Turn on burner valve to operate appliance. For complete shutdown, turn off burner valves, lighter valves and gas shut off valve located ahead of appliance gas inlet.

**(4) MAINTENANCE**

(a) **CLEANING Appliance must be cool before cleaning.**

Empty drip pan daily, or as needed. The stainless steel front and trim should be cleaned with mild soap or detergent or with a liquid cleanser especially for use on stainless steel. Never attempt to clean stainless steel with steel wool, abrasive cloths or powders.

(b) At least once a month, burner must be cleaned with water and steel brush to insure that burner is free of debris.

**(5) SERVICE**

No immediate need for service is anticipated. Thereafter service needs vary with frequency of use. Twelve hours per day, seven days per week is considered heavy use and appliance should be serviced every ninety days. For lesser use, consider service every six months.

**ALL SERVICE SHOULD BE DONE BY QUALIFIED PERSONNEL FROM A COMMERCIAL GAS EQUIPMENT SERVICE AGENCY OR THE GAS SERVICE DEPARTMENT OF YOUR LOCAL GAS UTILITY COMPANY. DISCONNECT POWER SUPPLY BEFORE SERVICING.**

***ANY SERVICE UNDER WARRANTY MUST BE AUTHORIZED BY FACTORY***

For appliances equipped with casters, the installation shall be made with a connector that complies with the standard for connectors for movable gas appliances, ANSI Z21.69 (Latest Edition), and a quick disconnect device that complies with the standard for Quick Disconnect devices for use with gas fuel, ANSI 21.41 (Latest Edition). Adequate means must be provided to limit the movement of the appliance without depending on the connector and the quick disconnect device or its associated piping to limit the appliance movement.

Note: If the appliance is removed from it's original installed position, the caster locks must be switched back on.